

Sparco Suit Sizing

Size	42	44	46	48	50	52	54	56	58	60	62	64
	X-Small	X-Small	X-Small	Small	Small	Medium	Medium	Large	Large	X-Large	XX-Large	XX-Large
Chest	31 - 33	34 - 35	36 - 37	37 - 38	39 - 40	40 - 41	42 - 43	43 - 44	45 - 46	47 - 48	48 - 50	50 - 51
Waist	25 - 27	29 - 30	31 - 32	32 - 34	34 - 35	35 - 37	37 - 38	38 - 40	40 - 41	42 - 43	43 - 45	45 - 46
Hips	32 - 34	34 - 35	36 - 37	37 - 38	39 - 40	40 - 41	42 - 43	43 - 44	45 - 47	47 - 48	48 - 50	50 - 51
Shoulders	14 - 16	15 - 16	15 - 17	16 - 17	17 - 18	18 - 19	19 - 20	19 - 21	20 - 21	21 - 22	22 - 23	22 - 24
Sleeve	23 - 24	21 - 22	22 - 23	23 - 24	24 - 25	25 - 26	25 - 26	26 - 27	27 - 28	28 - 30	28 - 30	29 - 30
Inseam	27 - 28	28 - 29	28 - 30	29 - 30	29 - 30	30 - 31	31 - 32	31 - 32	31 - 32	32 - 32	32 - 33	32 - 33
Back	16 - 17	16 - 17	16 - 17	16 - 17	17 - 18	17 - 18	17 - 18	18 - 19	19 - 20	19 - 20	20 - 21	20 - 21
Height	4'11" - 5'2"	5'0" - 5'2"	5'2" - 5'4"	5'3" - 5'5"	5'5" - 5'7"	5'7" - 5'9"	5'8" - 5'11"	5'9" - 6'0"	5'11" - 6'1"	6'0" - 6'2"	6'1" - 6'3"	6'2" - 6'4"

All measurements in inches unless otherwise indicated. Please see diagram below for sizing help.

Sizing Tips: A Driving Suit should have a loose, comfortable fit and allow for a full range of motion. Make sure the fit doesn't change when sitting down!

A suit that fits tightly may sacrifice the protective layer of air between the suit and your skin/underwear and can potentially decrease the level of protection provided by your suit.

Driving suits do not "break-in" or stretch over time.